

# UNDER COVER PADDING INSTRUCTIONS

1. Install LOOP-LOC Cover according to installation instructions.
2. Lay the undercover padding on top of the cover, at the covers edge.
3. With a marker or crayon, mark location of each strap on the padding.
4. **IMPORTANT:** Remove the padding completely off the cover before proceeding to step # 5
5. using a utility knife cut 2 1/2" wide slots, 3/4" down from the top of the padding hem , at the strap locations mark in step 2. ( see illustration #1 )
6. The padding section is now ready to be installed under the cover . Detach springs from the anchors and slide the padding section under the cover , hem side up.
7. Thread the spring and the strap through the slotted padding , and re - attach to the anchors . ( see illustration # 2 )

**HELPFUL HINT:**

\*\* Working in sections , detach spring from anchors and install padding . Re - attach springs and repeat procedure for each additional area requiring padding.

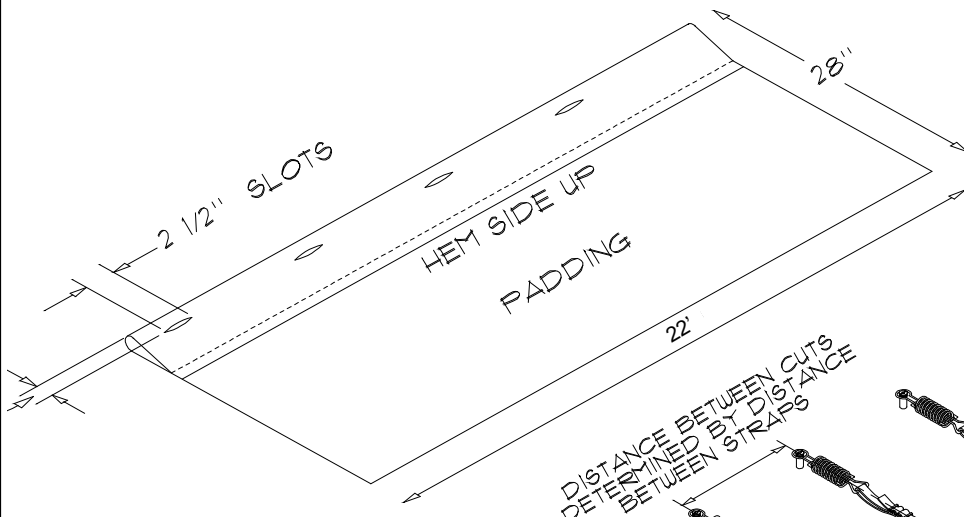


Illustration # 1

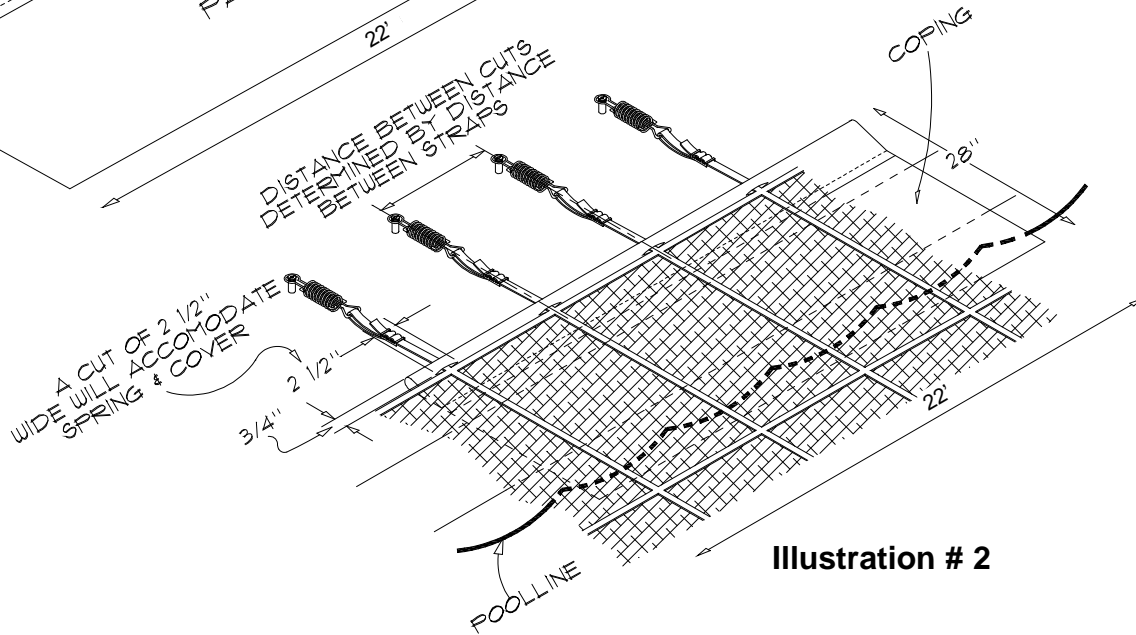


Illustration # 2



LOOP-LOC, LTD.  
390 Motor Parkway  
Hauppauge, NY 11788

1-800-LOC-LOOP  
In New York State 631-582-2626  
Fax #: 631-582-2636, WWW.LOOPLOC.COM